



*FreshRoast*<sup>plus</sup>  
COFFEE BEAN ROASTER



**ONE YEAR LIMITED WARRANTY**

Fresh Beans Inc. warrants this appliance to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase, except as noted. There is no warranty with respect to the following which may be supplied with this appliance: glass parts or glass chamber. This warranty extends only to the original consumer purchaser and does not cover damage from abuse, neglect, use for commercial purposes, or any other use not found in the printed directions. FRESH BEANS INC. DISCLAIMS ALL RESPONSIBILITY FOR CONSEQUENTIAL DAMAGES OR INCIDENTAL LOSSES CAUSED BY USE OF THIS APPLIANCE. Some states, or provinces, do not allow this exclusion or limitation of incidental or consequential losses, so the foregoing disclaimer may not apply to you. If you have a claim under this warranty, DO NOT RETURN THE APPLIANCE TO THE STORE! Please call our CUSTOMER SERVICE NUMBER. (For faster service please have the model number ready for operator to assist you.)

**888-757-2326**

This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state, or province to province.

*FreshRoast*<sup>plus</sup>  
COFFEE BEAN ROASTER



**Operating & Safety Instructions**

FRESH BEANS Inc.  
P.O. Box 982410 - Park City - Utah, 84098  
760.723.2826 Office • 760.723.4644 Fax  
888.757.2326 Toll Free

## Important Safeguards

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock and personal injury do not immerse cord, plugs or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments, not recommended by appliance manufacturer, may result in fire, electric shock or personal injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control “off”, then remove plug from wall outlet.
- Do not use appliance for other than intended use.

Appliances with glass containers:

- The container is designed for use with this appliance. It must never be used on range top.
- Do not set a hot container on wet or cold surface.
- Do not use a cracked container or container having a loose or weakened handle.
- Do not clean container with cleansers, steel wool pads or other material.

## Save These Instructions

## Caution

This appliance is for household use. Any servicing other than cleaning and user maintenance should be performed by an authorized service representative.

- Do not immerse base in water or try to disassemble.
- To reduce the risk of fire or electric shock, do not attempt to open the base. No user serviceable parts inside. Repair should be done by authorized service personnel only!
- Check voltage to be sure that the voltage indicated on the name plate on the bottom of unit agrees with your voltage.
- Keep your hands and the cord away from hot parts of the appliance during operation.
- Never overfill glass container with green coffee beans. Fill only to “FILL TO HERE” indicator on glass container or use 2 scoops (43cc) measuring cup supplied with unit.

## Special Cord Set Instruction

Regarding your cord set:

- A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- Longer detachable power-supply cords or extension cords are available and maybe used if care is exercised in their use.
- If a long detachable power-supply cord or extension cord is used, (1) the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance, (2) if the appliance is of the grounded type, the extension cord should be a grounding type-3 wire cord, and (3) the cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
- This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## Operating Instructions

### *Before Using the First Time*

Wash glass roasting chamber in warm soapy water with dish-cloth or sponge. Rinse thoroughly and dry.

CAUTION: to reduce the risk of electric shock, do not immerse roaster base, its cord or plug in water or other liquid.

### *Roasting Coffee Beans*

Your Fresh Roast coffee bean roaster is designed to roast approximately 3 ounces of coffee beans at one time. 3 ounces of roasted beans will yield 14-16 cups of coffee.

Fill 43cc measuring cup to top twice or fill to the “FILL TO HERE” mark on the metal band around the glass roasting chamber.

Never overfill glass container with beans as poor results will occur.

Place glass chamber on base unit; place basket and top on glass chamber.

Turn timer knob to 4-minute mark. Beans will roast 4 minutes, then cool for 2 minutes.

Allow beans to cool and machine to turn off before removing top, basket and glass chamber.

When machine shuts off your beans are ready to grind and brew.

### *Roasting Tips*

If you find coffee beans are not dark enough (1) Preheat roaster approximately 2 minutes before adding beans, (2) Add 1 minute to timed roasting sequence before timer reaches cool cycle.

CAUTION: over-roasting beans can create smoke. If this occurs, turn timer knob to “COOL” zone.

If you find coffee beans are too dark, deduct 1 minute from timer roasting sequence, do not preheat roaster.

During roasting you will hear the beans crackle at approximately 2-1/2 minutes. At approximately 4-5 minutes you will hear a rapid crackle. At this point the timer knob should be in the “COOL” zone. If the timer knob is not in the “COOL” zone manually advance it.

### *Cleaning*

Before each use, always empty the chaff\* from the basket and clean screens with a soft brush.

*\*Chaff is the outer layer of the coffee bean.*

For questions and answers regarding this machine, call: 1-888-757-BEAN (2326)